

UNEQUAL®
DOME®
Easy install instructions





#BATTLEREADY
UNEQUAL.com

Before you start:

- Read these instructions and warning in full before proceeding.
- Remember, DOME is supplemental padding. Do not peel apart the layers of the DOME.
- DOME does not adhere directly to the inside of the cap; there is no adhesive.

To optimize fit:

The DOME can be customized to the exact shape of your fabric cap. It is designed for a large to extra-large fabric cap, but can be trimmed to fit small and youth sizes:

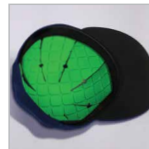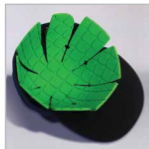

Step 1

Open your package and find the back tab of the DOME. The back tab **does not** have any semicircles towards the center.

Step 2

Press the pad into the cap with the front tab positioned toward the bill of the cap.

Step 3

Use a marker to mark parts of the DOME that go beyond the bottom of the cap.

Step 4

Trim any overlapping or excess padding with sharp scissors.

Step 5

Place DOME back into the cap and tuck the tabs under the caps lip if one is provided.

That's it! Now go play!

Care instructions:

- Remove from cap and hand wash with soap and lukewarm water.
- Do not submerge the DOME in water.
- Air dry